


Трапеция (Т)  
Trapezoid

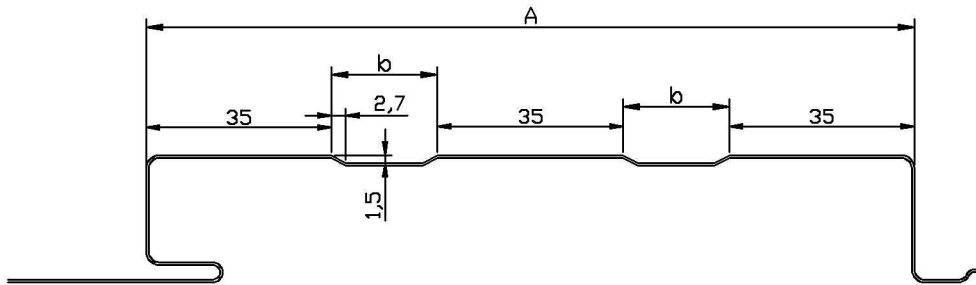

Полезная ширина effective width	A	b	Кол-во мест "b" Number of seats "b"
120	90	20	1
130	110	40	1
140	130	60	1
150	150	80	1
180	150	22,5	2
190	170	32,5	2
200	190	42,5	2
210	210	52,5	2
285	255	38,4	3
295	275	45,0	3
305	295	51,7	3
315	315	58,4	3
370	340	41,3	4
380	360	46,3	4
390	380	51,3	4
400	400	56,3	4
490	460	50	5
500	480	54	5
510	500	58	5
520	520	62	5